Side by Side Refrigerator

PRODUCT MODEL NUMBERS

GSF26C4EX	WSF26C2EX
GSF26C5EX	WSF26C3EX
GSS26C4XX	WSF26D2EX
GSS26C5XX	WSF26D4EX

Electrical: A 115-Volt, 60-Hz., AC-only 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer control depending on the model) to the desired setting.

Water: A cold water supply with water pressure between 30 and 120 psi (207 and 827 kPa) is required for the water dispenser and ice maker.

IMPORTANT: The pressure of the water supply coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 30 and 120 psi (207 and 827 kPa).

If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa).

PRODUCT DIMENSIONS

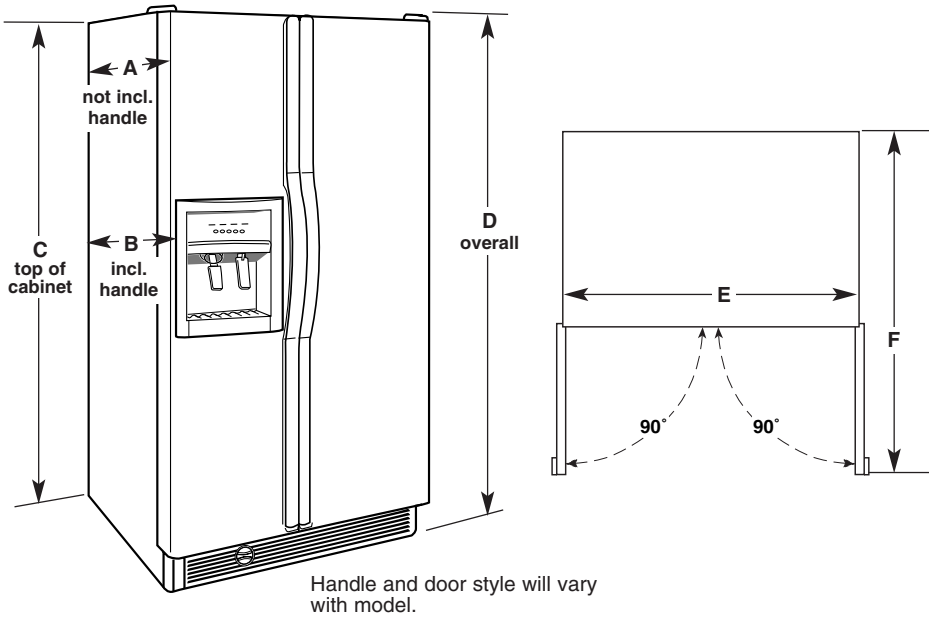

Handle and door style will vary with model.

Dimensions “C” and “D” include rollers extended ¾" (1.9 cm).

Model #	Model Size	Depth “A”	Depth w/Handle “B”	Cab. Height “C”	Overall Height “D”	Cab. Width “E”	Depth “F” with Doors Open 90°
GSF26C4EX GSF26C5EX WSF26C2EX WSF26C3EX WSF26D2EX WSF26D4EX	26.4 cu. ft.	32 7/16" (82.39 cm)	34 1/8" (86.68 cm)	68 5/8" (174.31 cm)	69 1/4" (175.90 cm)	35 7/16" (90.01 cm)	50 13/16" (129.06 cm)
GSS26C4XX GSS26C5XX	26.4 cu. ft.	33 1/2" (85.09 cm)	36" (91.44 cm)	68 5/8" (174.31 cm)	69 1/4" (175.90 cm)	35 7/16" (90.01 cm)	50 7/8" (129.22 cm)

LOCATION REQUIREMENTS

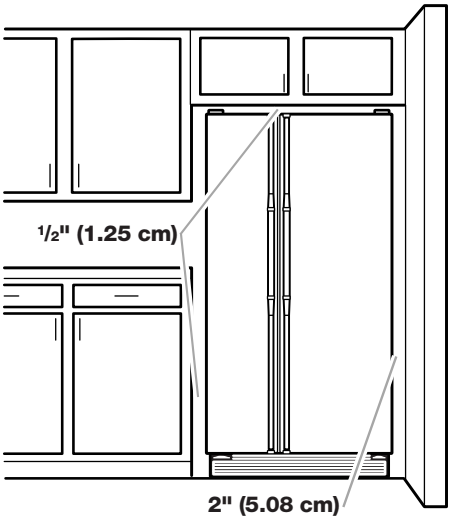

To ensure proper ventilation for your refrigerator, allow for ½" (1.25 cm) of space on each side and at the top. Allow for 1" (2.54 cm) of space behind the refrigerator. If your refrigerator has an ice maker, allow extra space at the back for the water line connections. When installing your refrigerator next to a fixed wall, leave a 2" (5.08 cm) minimum space on each side (depending on your model) to allow the doors to swing open.

Normal minimum cabinet cut-out width required for product installation is 36" (91.44 cm). However, if the product is placed against an extended wall and the ability to remove the crisper pans is desired, an additional 18" (45.72 cm) of cabinet width is required, so a total cabinet opening width of 54" (137.16 cm) is recommended.

NOTE: Do not install the refrigerator near an oven, radiator, or other heat source, nor in a location where the temperature will fall below 55°F (13°C).

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice.

Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.

Ref. W10281961B
2/3/11